

Installation Information

USING THIS ACRONYM "STAMPED" WILL ASSIST YOU IN ORDERING THE APPROPRIATE HOSE.

- S = SIZE**
- T = TEMPERATURE** (WORKING & CLEANING)
- A = APPLICATION**
- M = MEDIA** (MATERIAL BEING TRANSFERED)
- P = PRESSURE** (WORKING & CLEANING)
- E = END STYLE** (TYPE & ALIGNMENT)
- D = DELIVERY** (SPECIAL PACKAGING)

STAMPED

Chemical Charts are located on our website

Prior to Installation

Inspect hose completely for signs of obvious damage. Possible damage may include cuts to cover, kinking, broken braids and crushing. This damage can reduce hose life and pressure rating.

Do Not Use any damaged hose.

Hose should be application specific. Review materials, pressures, chemical compatibility, temperature and environment to ensure proper selection of hose.

- Restrict hose movement to a single plane (Fig. 1) to minimize resultant twisting or torque. Within the bending plane is where flexing should occur. Stress fatigue increases with excessive bending of hose.
- Axial or twisting movement (Fig. 2) should be eliminated. The likelihood of leakage or failure increases for hoses that are twisted (torqued) during assembly. Floating flanges or swivel-type fittings (i.e., JIC) can eliminate improper twisting.
- Avoid stretching or compressing the hose (Fig. 3) along its longitudinal axis with in-line installation.
- Failure of hose will occur when hose is bent (Fig. 4) beyond minimum bend radius. Bend radii are given for individual products and sizes. The bend radius values must be observed (measure to inside radius of fluoropolymer-lined hose and centerline for stainless steel metal hose) for hoses to be installed properly. Occasionally, vacuum and pressure ratings are based on not to exceed 2% minimum bend radius. The manufacturer should be contacted for specific hose ratings and data.



Motion Calculations

Axial Motion: Motion that occurs when a hose is compressed along its longitudinal axis. Axial motion is only applicable in very short lengths of annular hose only. Fluoropolymer lined hose should not be subjected to axial motion.

Offset Motion: Motion that occurs when one end of the hose is deflected in a plane perpendicular to its longitudinal axis with the ends remaining parallel. In offset applications where motion is repeated, the offset should never exceed 25% of the minimum bend radius. To calculate the required live length to achieve a desired offset, use the following calculations:

$$LL = \sqrt{6YR + Y^2}$$

LL = Hose live length, inches
 R = Min. Bend Radius, inches
 Y = Offset, inches
 OAL = LL + Fitting Length + (2x nominal hose diameter)

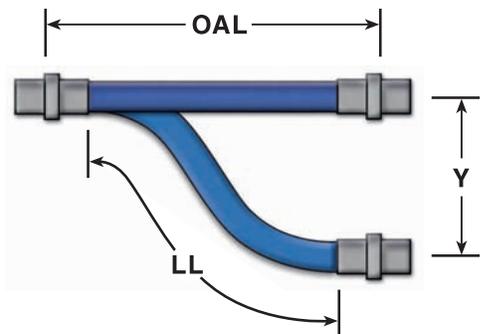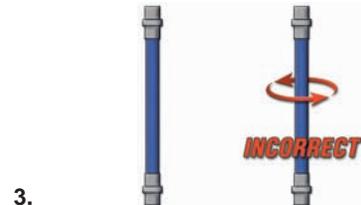

Note: Where offset motion "Y" occurs on both sides of hose centerline, the hose live length should be based on total travel, or 2Y. The modified calculation will be:

$$LL = \sqrt{12YR + (2Y)^2}$$