


# INTERFACE AMPLIFIER FOR PRE-SET BATCH CONTROL WITH FLUX FMO LIQUID METER IN AUTO MODE



Type FSV 100	Type FSV 112	Type FSV 132
integral mounting onto FMO – see picture on page 3. Supply voltage 230 Volt, 50 Hz, protected to IP 54. With 5 m power supply cable. Two output signals for: main flow control for a pump and/or magnetic valve and secondary control for turn down controlling a magnetic valve or relay. With plug connections for control features.	Complete with housing for wall mounting. Supply voltage 230 Volt, 50 Hz, protected to IP 54. Two output signals for: main flow control for a pump and/or magnetic valve and secondary control for turn down controlling a magnetic valve or relay. Input socket for power supply and output plugs for control features.	without housing for mounting into a switch-board. Supply voltage 230 Volt, 50 Hz, protected to IP 20. Two output signals for control of a pump and two magnetic valves.
<b>Part No. 001 49 040</b>	<b>Part No. 001 49 041</b>	<b>Part No. 940 04 020</b>



Accessories for FSV 100, FSV 112 and FSV 132	
1	Power supply cable, 5 m, for use with FSV 112 <b>Part No. 934 08 037</b>
2	Connecting cable to motor, 0,5 m, for use with FSV 100 and FSV 112 <b>Part No. 934 08 035</b>
3	Connecting cable to magnetic valve, 5m, for use with FSV 100 and FSV 112 <b>Part No. 934 08 036</b>
4	Connecting cable 5 m, to transmit the pulses from FMO to FSV 112 <b>Part No. 934 08 039</b>
5	Connecting cable, to transmit the pulses from FMO to FSV 121-1 Ex and FSV 132. <b>Part No. 934 08 038</b> 5 m long <b>Part No. 934 08 040</b> 10 m long

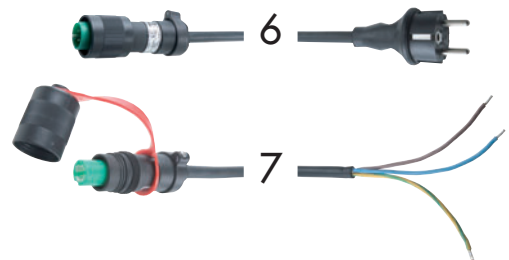

Type FSV 121-1 Ex	Type FSV 121 Ex	Accessories for FSV 121 Ex
explosion-proof to II 2 G EEx ed (ia) IIC T6. Supply voltage 230 Volt, 50 Hz, protected to IP 54. One output signal for control of a pump or a magnetic valve. Without plug connections. Connecting cable to transmit the pulses from FMO see above accessories item 5.	explosion-proof to II 2 G EEx ed (ia) IIC T6. Supply voltage 230 Volt, 50 Hz, protected to IP 54. One output signal for control of a pump or a magnetic valve. With connecting 5 m connecting cable to transmit the pulses from FMO. Input socket for power supply and output plugs for control features.	<b>6</b> Power supply cable, 5 m <b>Part No. 934 08 048</b>
<b>Part No. 001 49 039</b>	<b>Part No. 001 49 051</b>	<b>7</b> Connecting cable to motor or magnetic valve, 5 m <b>Part No. 934 08 049</b>

Springer Pumps, LLC

Tel: 866-777-6060

Fax: 866-777-6383

[info@springerpumps.com](mailto:info@springerpumps.com)

[www.springerpumps.com](http://www.springerpumps.com)